

ZHEJIANG JMTHY PHOTOVOLTAIC TECHNOLOGY CO.,LTD








PV-JM601 Connector Installation Instruction





Step 1: tools required (see step 2 for the use method of the terminal clamp).

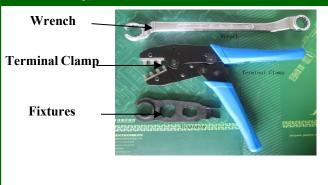


Step 2: (1) Adjustment of riveting pressure: loosen the screw on the pressure ring with a crosshead screwdriver and rotate the adjusting plate (counterclockwise rotation can increase the pressure, otherwise the pressure will decrease). See picture A.

(2) If you want to loosen the terminal clamp when riveting work is half finished, just push the stop block up by hand. See picture B.




Step 3: parts description

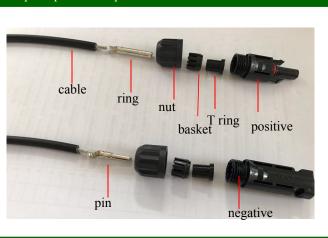

Step 4: cut the cable before installing the connector (strip 9mm).



Step 5: use the **terminal clamp** to rivet the pin and the socket.

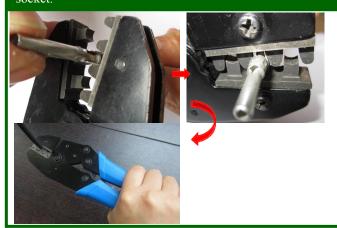

Step 6: riveting is completed.





PV-JM601



Step 7: assemble the connector.



Step 8: assemble the cable and the connector (there will be a sound of click when the installation is in place).



Step 9: use the wrench to adjust the clearance of the nut.



Step 10: adjust the clearance of the nut to 0.2 - 0.8 mm.



Step 11: when the positive and the negative should be separated after insertion, please use the fixtures.



Remarks:

- 1.Do not insert the positive to the negative or separate them in the case of electric charge;
- 2.Lubricants are not recommended when installing the connector.





THANK YOU!

JMTHY

ZHEJIANG JMIHY PHOTOVOLTAIC TROHNOLOGY CO.,LTD

Address: NO.158 Jinci Road Hangzhouwan NewZone, Cixi Ningbo City, Zhejiang, CHNA

Sales Dept: +86-574-63537888 Imp&Exp: +86-574-63575050

Fax: +86-574-63667999 E-mail: jmthy@nbjiaming.com

Web: http://www.nbjiaming.com

