
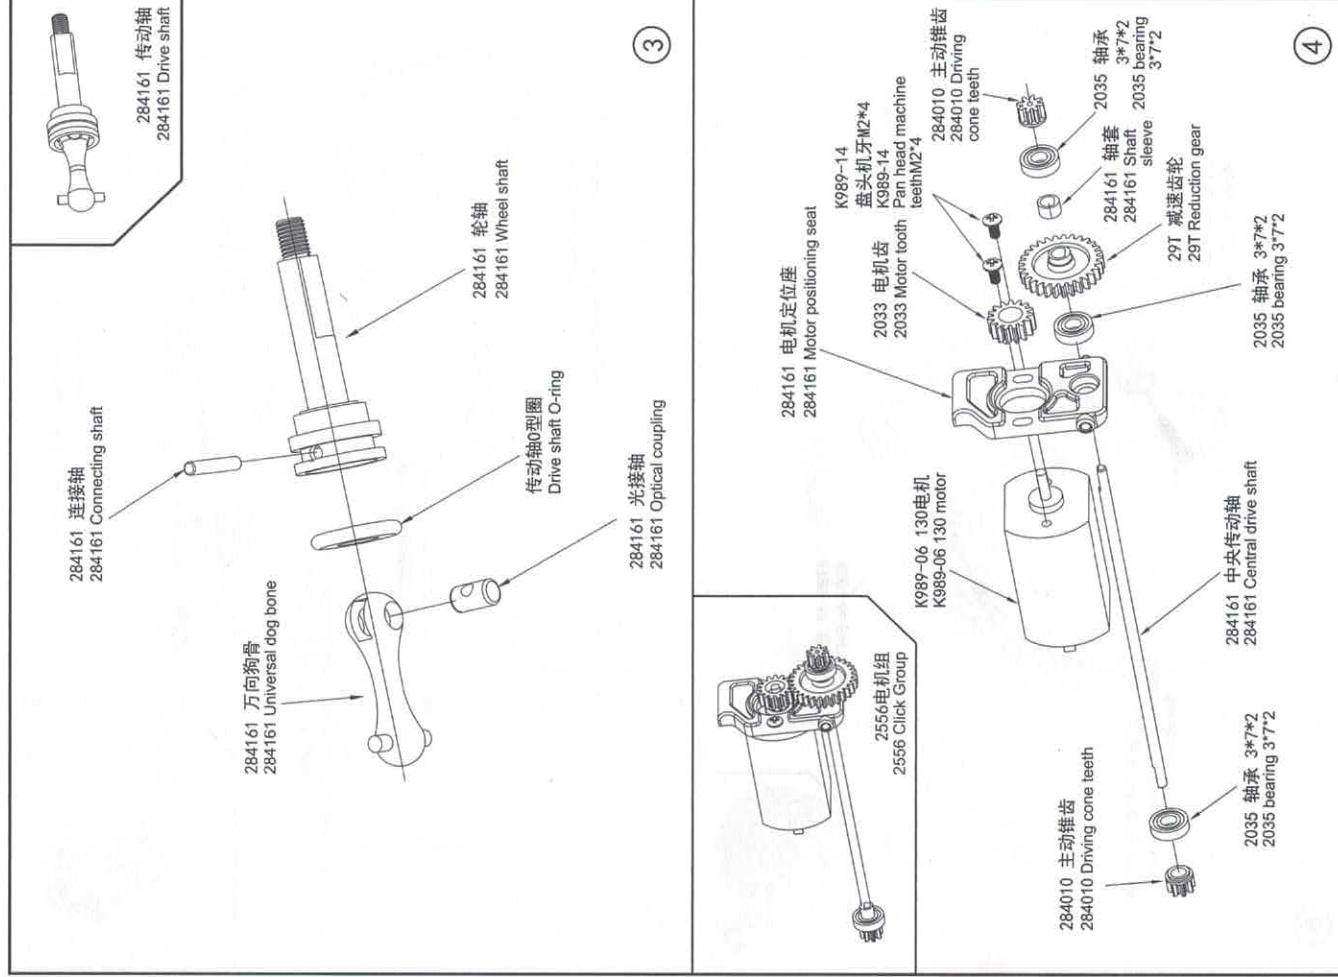





装配分解图 Assembly Exploded Diagram

装配分解图 Assembly Exploded Diagram

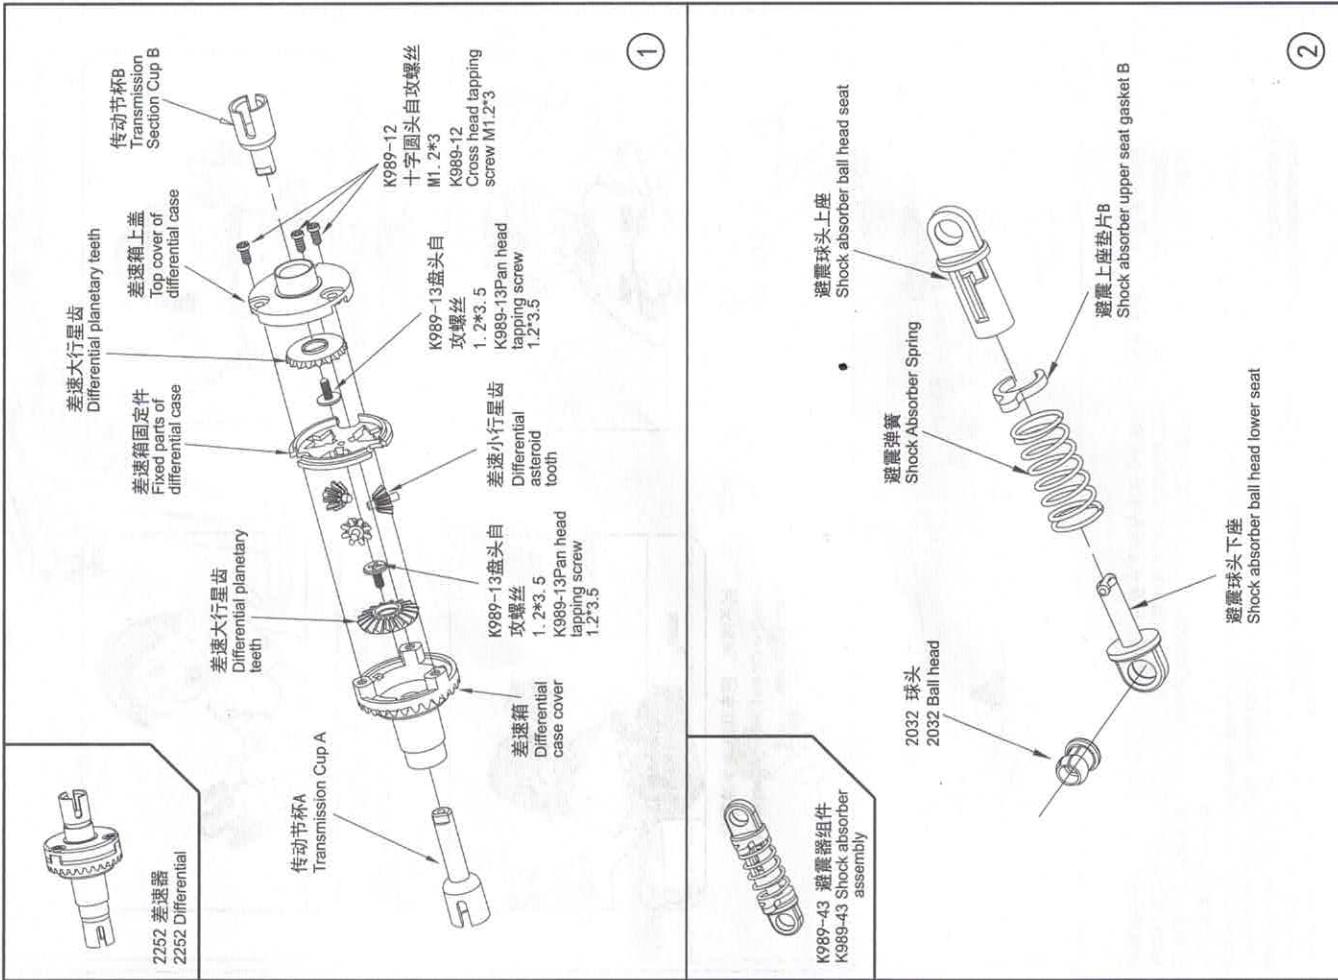





## 装配分解图 Assembly Exploded Diagram

### 装配分解图 Assembly Exploded Diagram

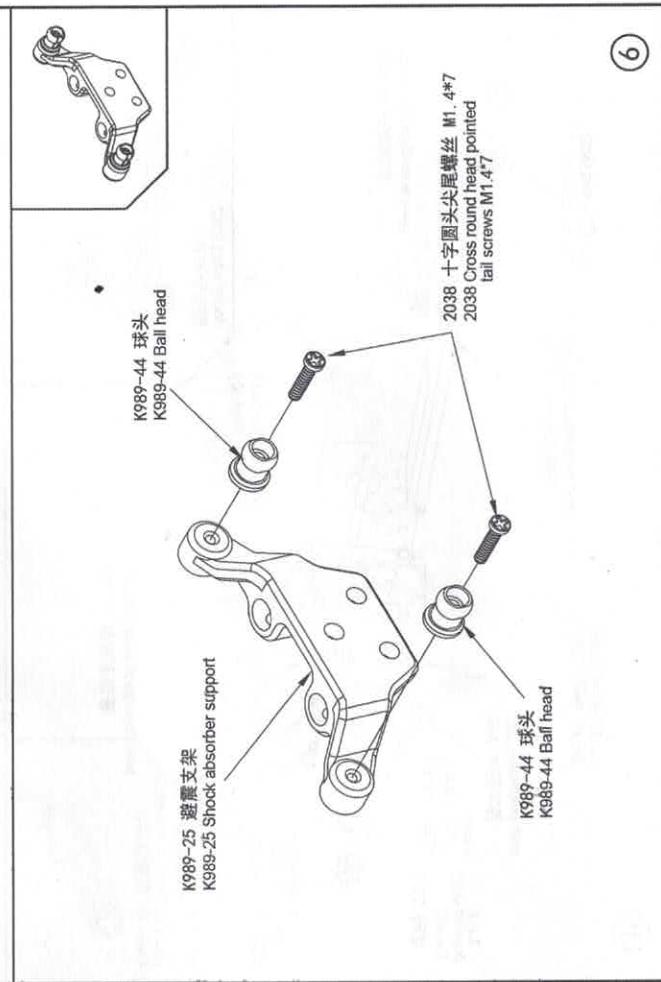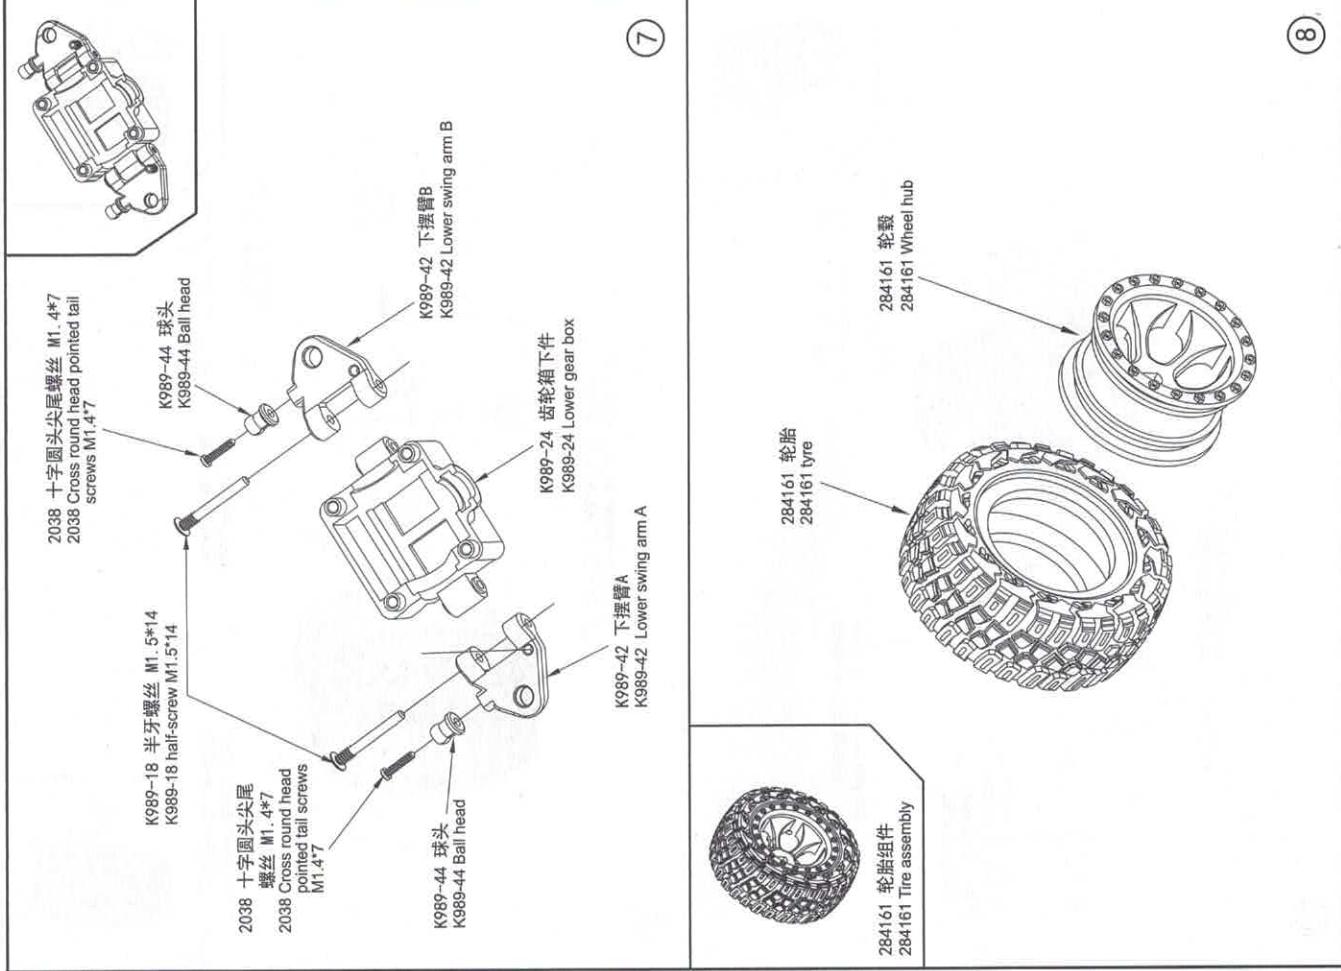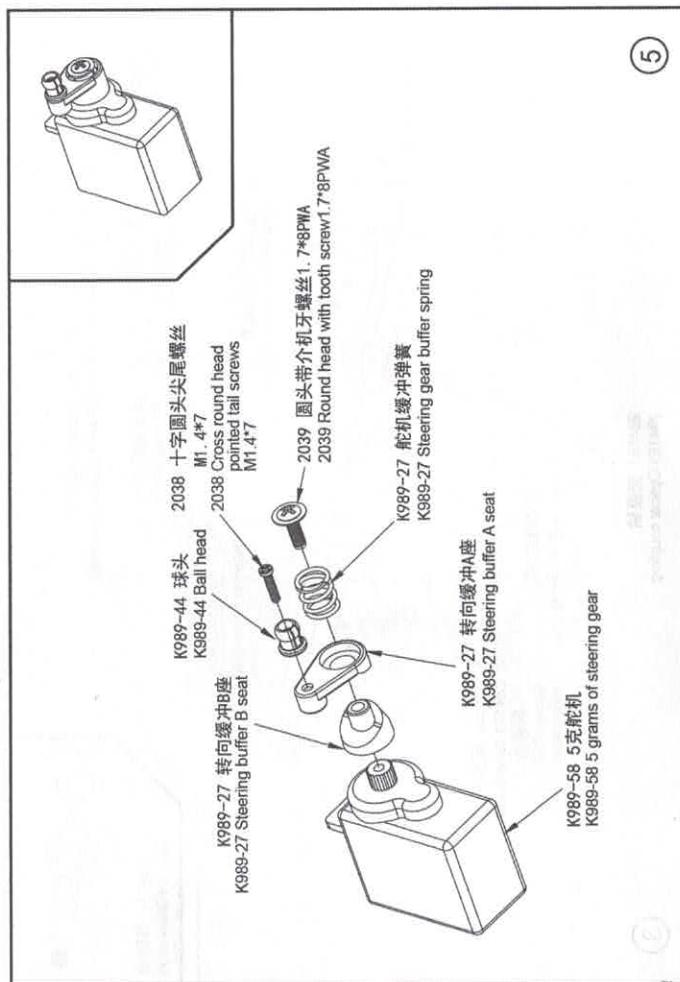



装配分解图 Assembly Exploded Diagram



装配分解图 Assembly Exploded Diagram

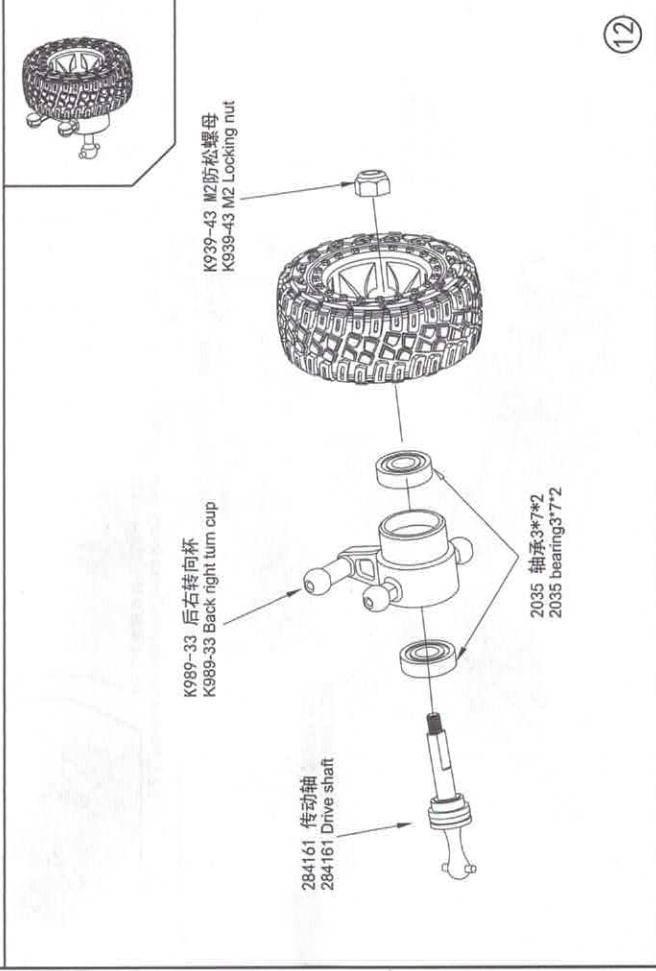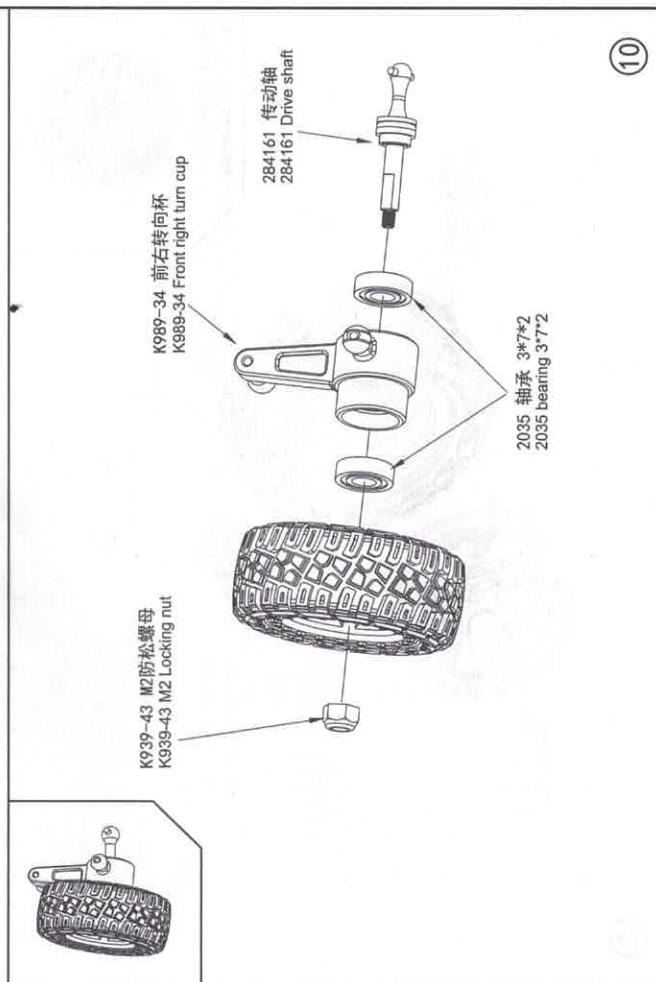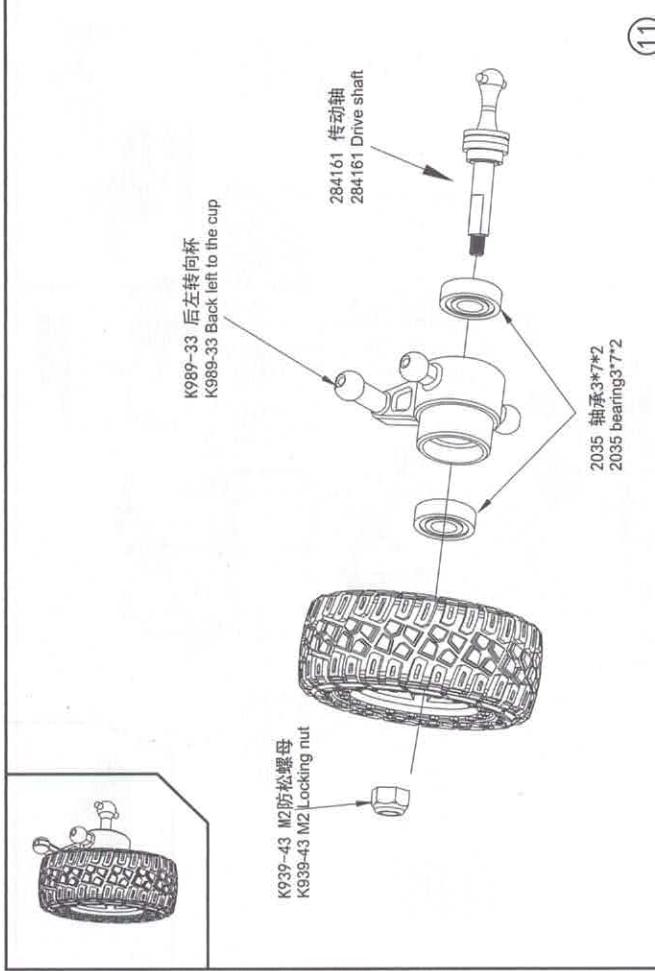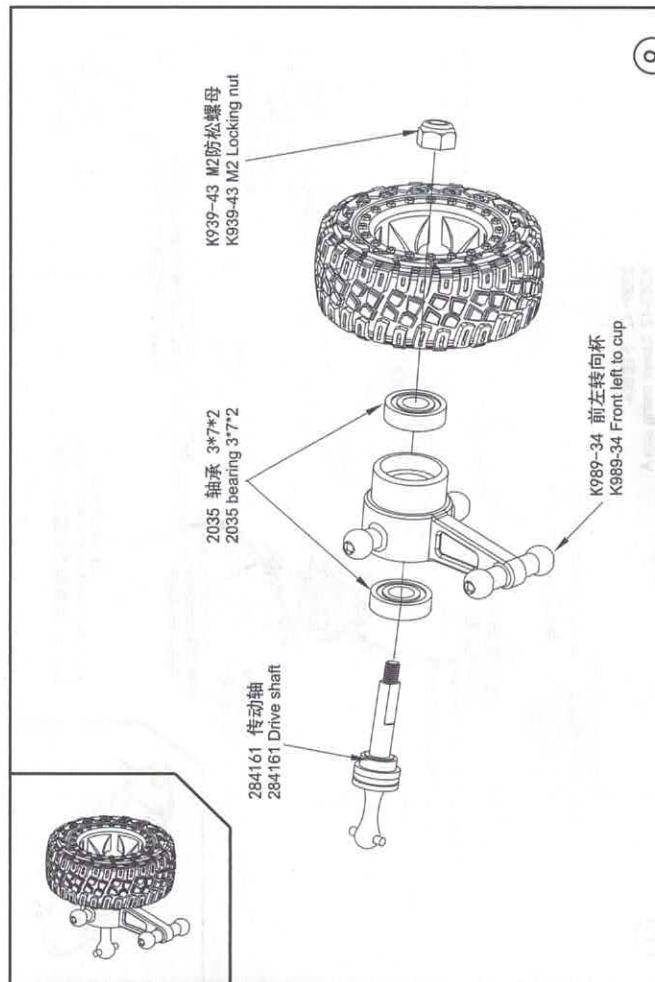

## 装配分解图 Assembly Exploded Diagram



### 装配分解图 Assembly Exploded Diagram

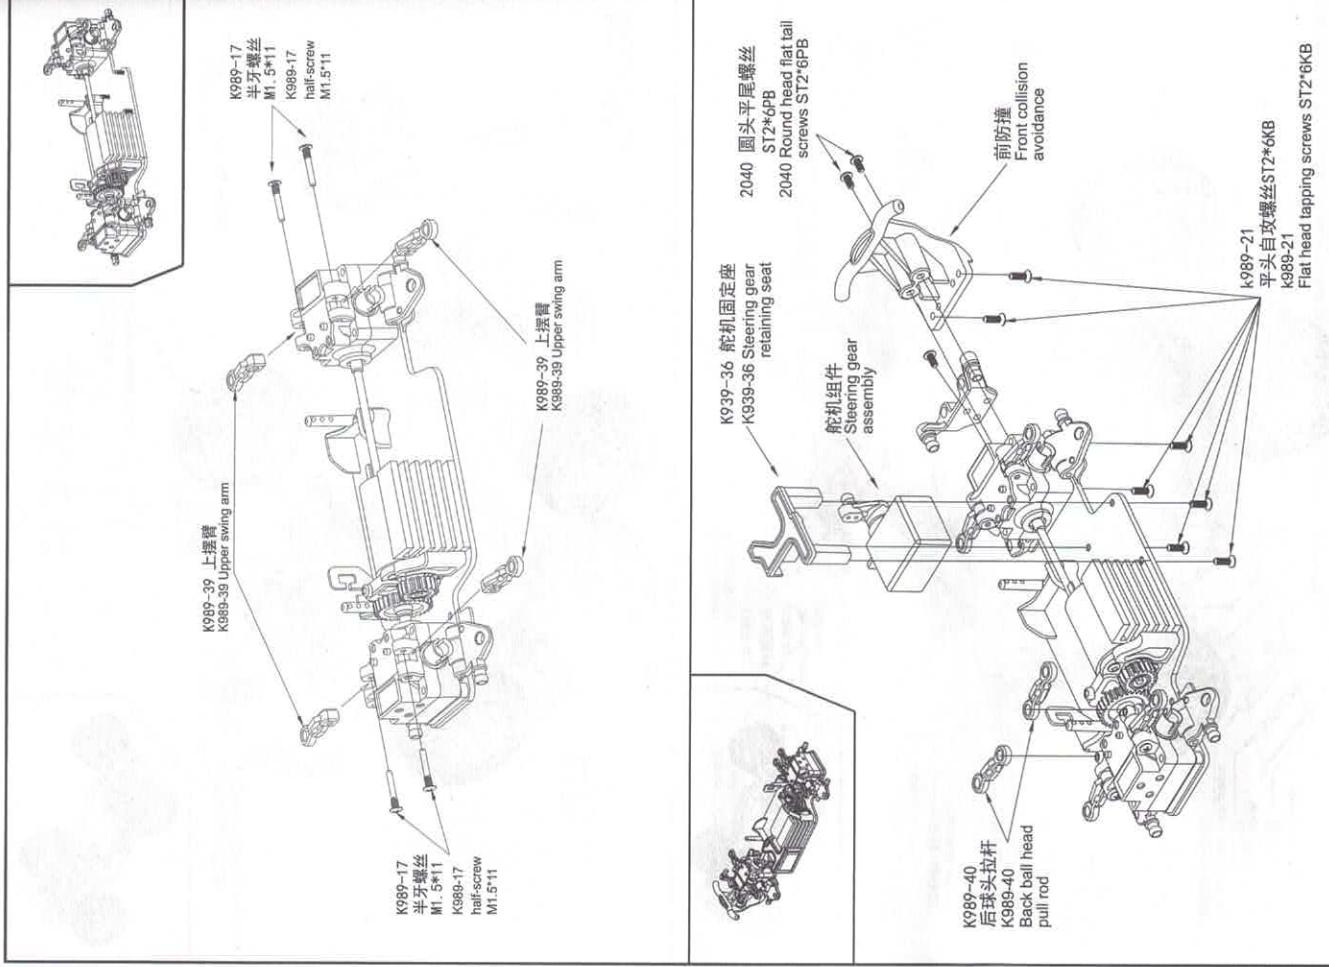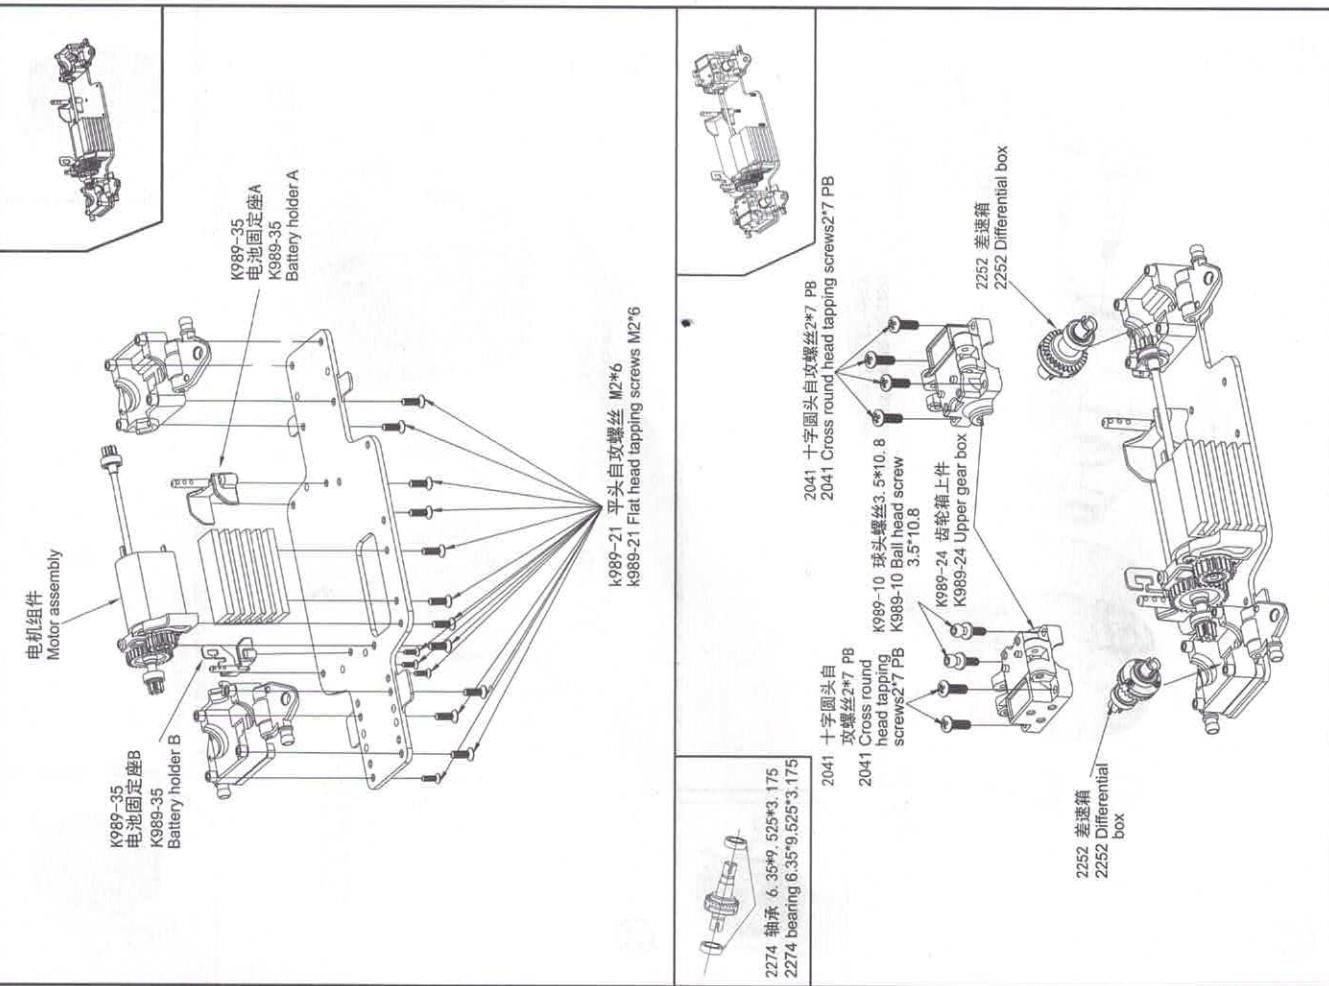

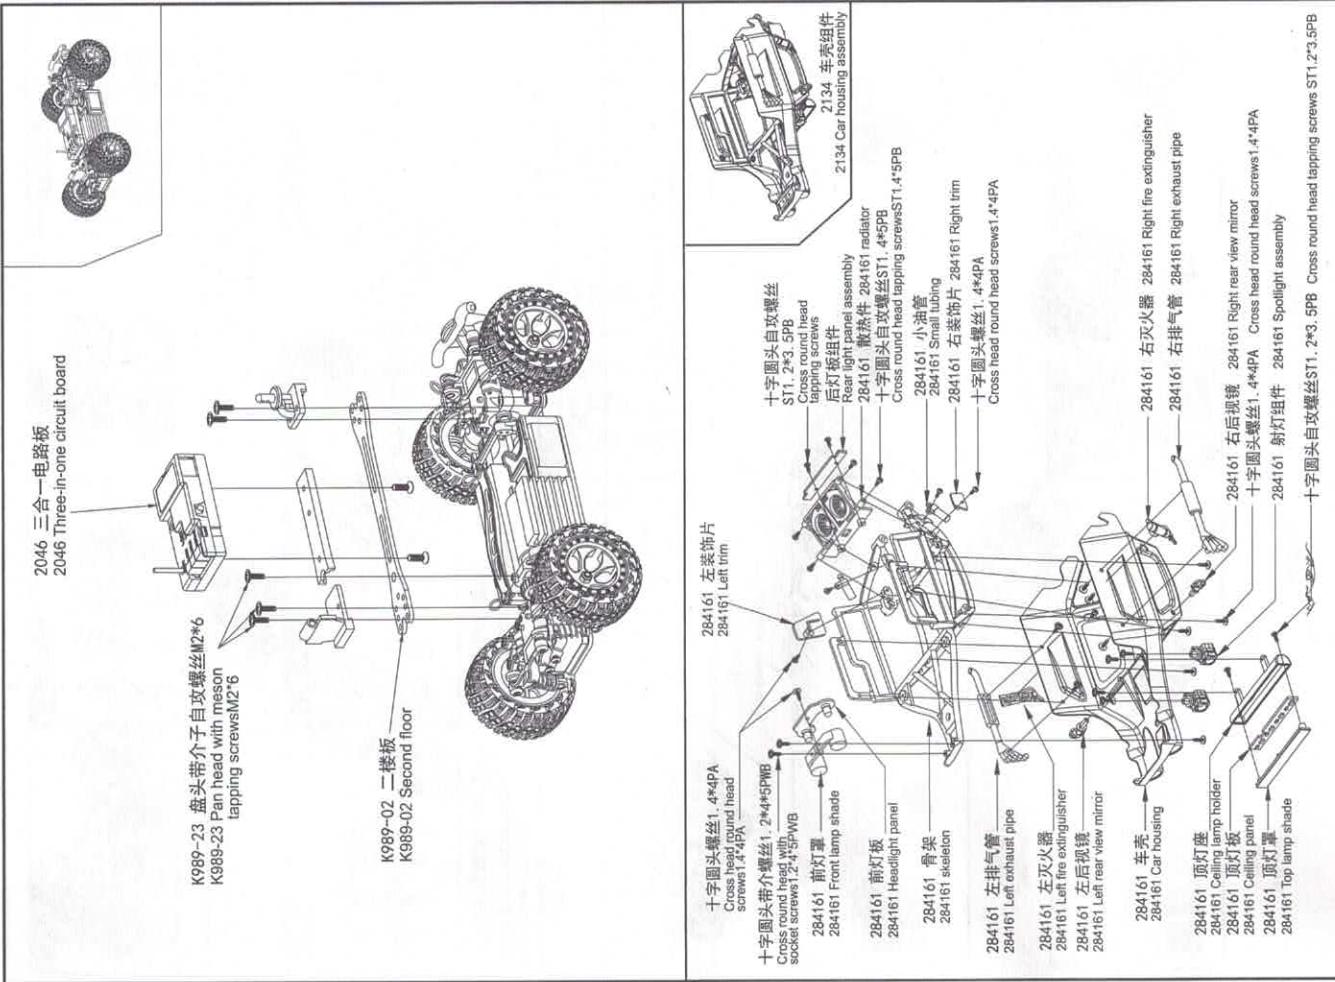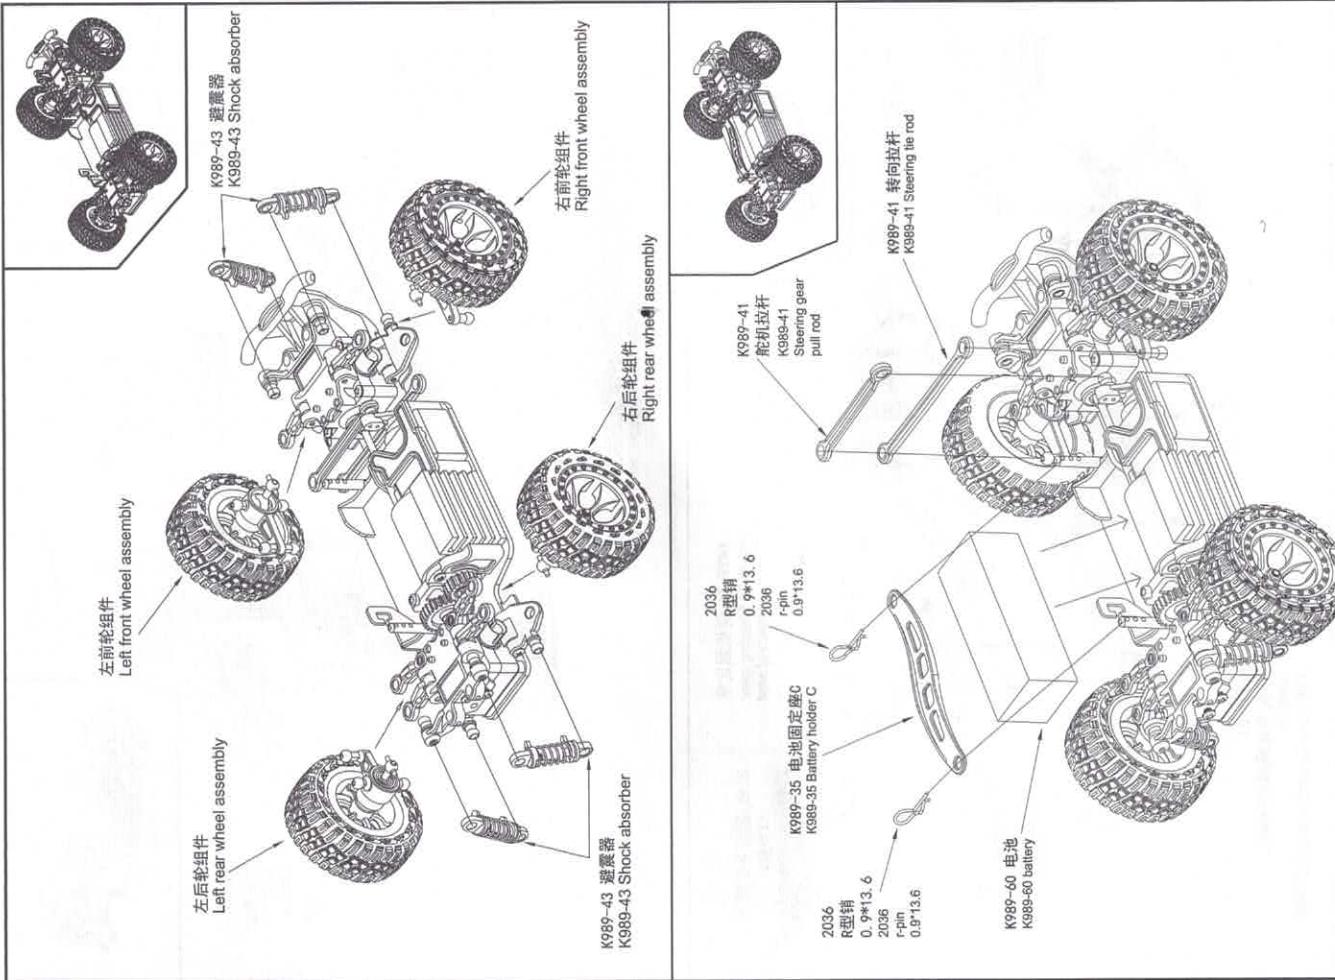

## 装配分解图 Assembly Exploded Diagram

## 销售零件视图 Sale parts view

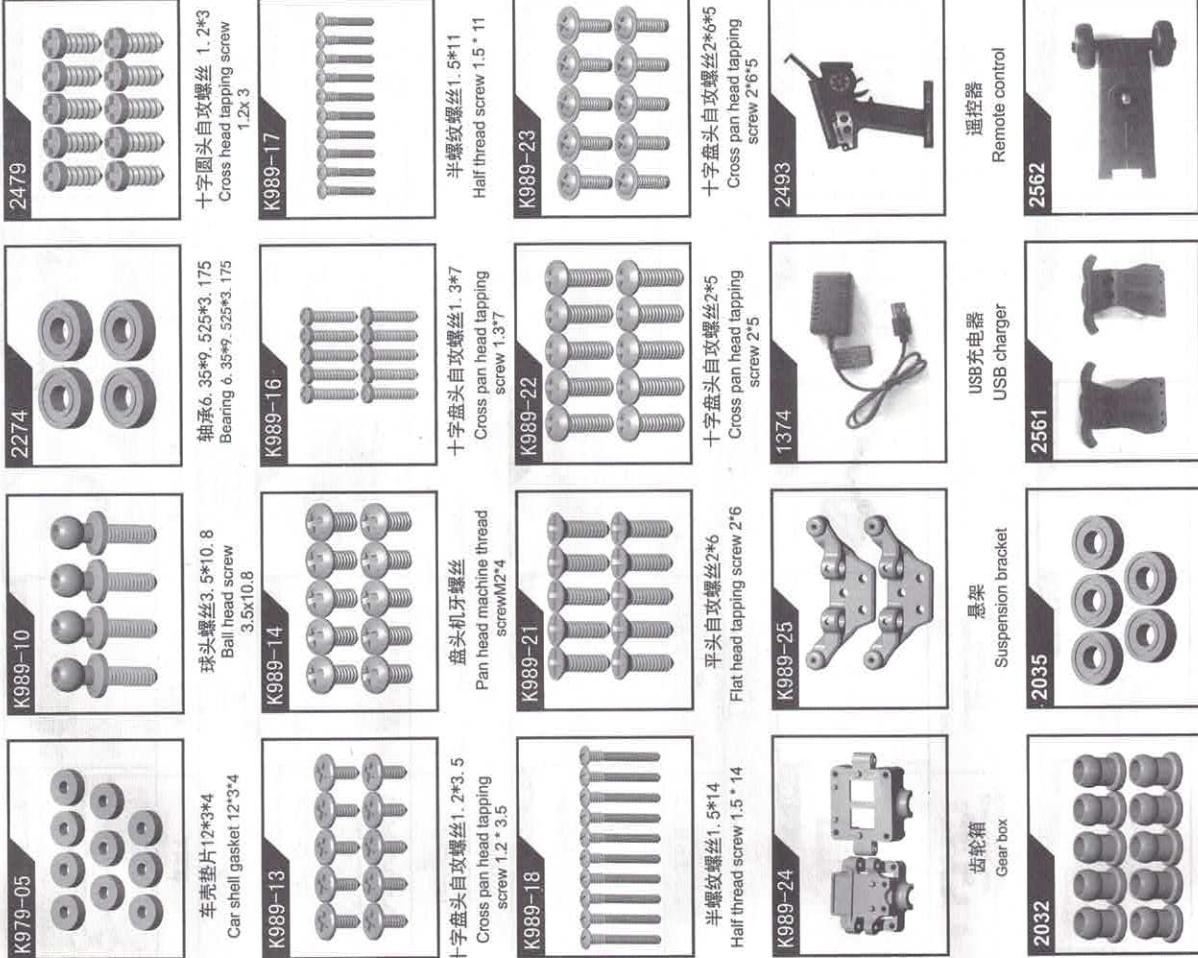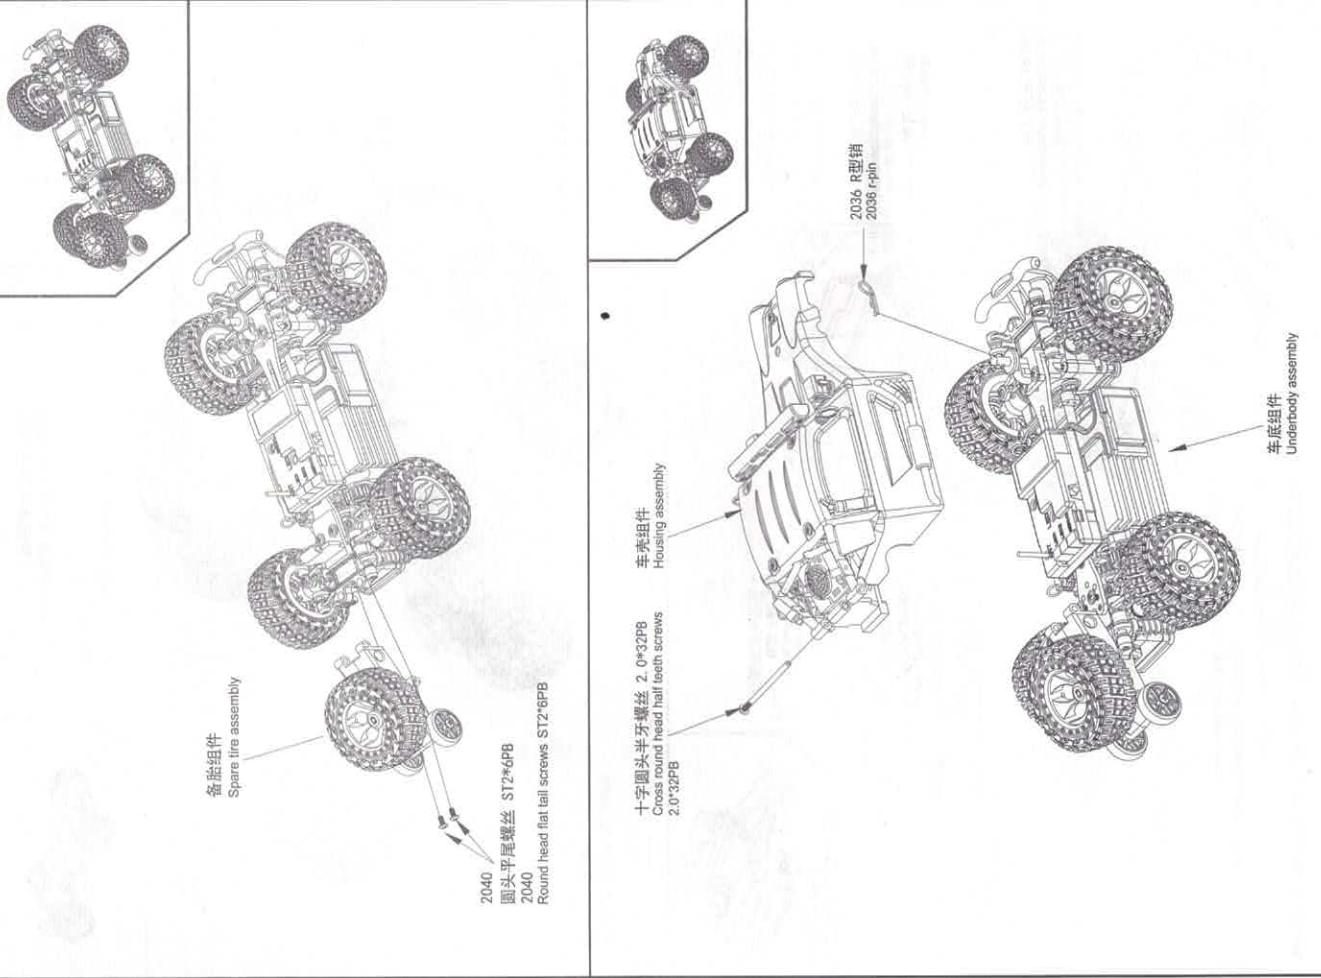

Front collision avoidance 前防撞

轴承3\*7\*2 Bearing 3\*7\*2

球头 Ball head

备胎架 Spare tire rack

## 销售零件视图 Sale parts view

K989-33		K989-34		K989-35		K989-36		K989-39	
After turning the cup	转向杯后 Before turning to the cup	转向杯前 Battery seat assembly	执行器固定座 Actuator fixing seat	执行器组件 Actuator assembly	轮毂 Tire	车壳组件 Housing assembly	传动轴 Drive shaft	板盒固定座 Plate box fixing seat	二楼板 Second floor
2133		2134		2135		2136		2137	
2036		2037		2038		2039		2040	
2041		2044		2248		2249		2253	
2252		2255		2256		2256		2257	
2259		2260		2261		2262		2263	

## 销售零件视图 Sale parts view

K989-33		K989-34		K989-35		K989-36		K989-39	
After turning the cup	转向杯后 Before turning to the cup	转向杯前 Battery seat assembly	执行器固定座 Actuator fixing seat	执行器组件 Actuator assembly	轮毂 Tire	车壳组件 Housing assembly	传动轴 Drive shaft	板盒固定座 Plate box fixing seat	二楼板 Second floor
2133		2134		2135		2136		2137	
2552		2553		2554		2555		2556	
2557		2558		2559		2560		2561	
2564		2565		2566		2567		2568	